

# GASTEC Instructions for No.136 L Methyl Bromide Detector Tube

## FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

### ⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec Pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties; and guarantees regarding performance and data accuracy.

### ⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sample.

### ⚠ NOTES : For maintaining performance and reliability of the test results.


1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the "INTERFERENCES" below.
5. Shelf life and storage conditions of the tube are marked on the label of the tube box.

## APPLICATION OF THE TUBE :

Use this tube for the detection of Methyl Bromide in air or the industrial areas and determining the environmental atmospheric condition.

## SPECIFICATION :

(As a result of Gastec's commitment to continued improvement, specifications are subject to change without notice)

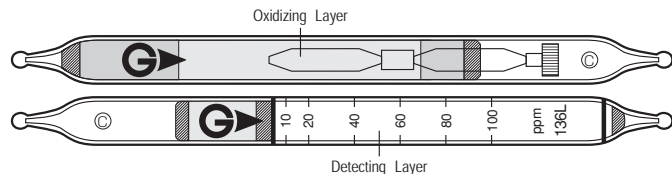

Measuring Range	2.5 - 10 ppm	10 - 100 ppm	100 - 200 ppm
Number of Pump Strokes	4	1	1/2
Correction Factor	1/4	1	2
Sampling Time	1.5 minutes per pump stroke		45 seconds
Detecting Limit	0.5 ppm (n = 4)		
Colour Change	White → Yellow		
Reaction Principle	$\text{CH}_3\text{Br} + \text{I}_2\text{O}_5 + \text{H}_2\text{S}_2\text{O}_7 \rightarrow \text{Br}_2$ $\text{Br}_2 + \text{o-Tolidine} \rightarrow \text{Yellow Holoquinone}$		

**Coefficient of Variation : 10% (for 10 to 20 ppm), 5% (for 20 to 100 ppm)**

**\*\* Shelf Life : Please refer to the Validity Date printed on the tube box.**

**\*\* Store the tubes in dark and cool place.**

## CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

1. **Temperature :** No correction is required.
2. **Humidity :** No correction is required.
3. **Pressure :** To correct for pressure, use the formula below.

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

## MEASUREMENT PROCEDURE :

1. For checking the leakage of the pump, insert a freshly sealed detector tube into the pump. Follow the instructions provided with the pump operation manual.
2. Break the tips off a fresh primary tube and analyser tube using the tube tip breaker of the pump.
3. Connect the © marked ends with rubber tubing after snapping off each end.
4. Insert the analyser tube securely into pump inlet with the arrow **G** on the tube pointing toward the pump.
5. Make certain the pump handle is all the way in. Align the guide marks on the pump body.
6. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait 1.5 minutes and confirm the completion of the sampling.
7. For smaller measurements less than 10 ppm, repeat the above sampling procedure three more times. For measurements higher than 100 ppm, prepare a fresh tube and perform a half pump stroke.
8. Read concentration level at the interface where the stained reagent meets the unstained reagent.
9. If necessary, multiply the readings by the correction factors of pump stroke and atmospheric pressure.

## INTERFERENCES :

Substance	Interference	Interference gas only
Chlorine, Bromine, NOx	+	Yellow
Saturated Halogenated Hydrocarbons	+	Yellow

The table of this interference gases primarily expresses the interference of each coexisting gas in the gas concentration range, equivalent to the gas concentration. Therefore, the test result may be given positive result by the other substances not listed in the table. For more information is needed, please contact us or our distributors in your territory

## APPLICATION FOR OTHER SUBSTANCES :

Tube 136L can also be used for other substances as below:

Substance	Correction Factor	No. of Pump Strokes	Measuring Range
Chlorobromomethane	1.1	1	11 - 110 ppm
1,1-Dibromoethane	0.7	1	7 - 70 ppm
1,2-Dibromoethane	0.8	1	8 - 80 ppm
Dibromomethane	0.5	1	5 - 50 ppm
Ethyl Bromide	1.0	1/2, 1, 4	2.5 - 200 ppm
n-Butyl Bromide	1.0	1	10 - 100 ppm

### (1) Benzyl bromine

Benzyl Bromide Conc. (ppm)	10	21	46	80	100
Tube 136L Reading (n=1)	10	20	40	60	80

### (2) Bromform

Bromform Conc. (ppm)	1	5	10	20	30	40	50
Tube 136L Reading (n=1)	10	20	40	60	80	100	

## CORRECTION FACTOR :

Detector tubes are primarily designed to measure specific gases. But it is also possible to measure other substances of similar chemical properties with the aid of a correction factor or chart. Therefore, please make use of the correction factor/chart measuring ranges as a reference. For more precise factor please contact your Gastec distributor.

**DANGEROUS AND HAZARDOUS PROPERTIES :**

Threshold Limit Value-Time Weighted Average by ACGIH (2009): 1 ppm

Explosive Range : 10 – 15 %

**DISPOSAL INSTRUCTION :**

Reagent of the primary tube uses a small amount of hexavalent chromium. Reagent of the analyser tube uses a small amount of hexavalent chromium. When disposing the tube regardless of used or unused, follow the rules and regulations of the local government.

**WARRANTY :**

If you have any questions regarding gas detection and quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation  
8-8-6 Fukayanaka, Ayase-City, 252-1195, Japan  
<http://www.gastec.co.jp/>  
Telephone +81-467-79-3910 Facsimile +81-467-79-3979

IM00136LE3  
Printed in Japan  
10C1Z