

GASTEC Instructions for No.159L Tetrahydrofuran Detector Tube

FOR SAFE OPERATION :

Carefully read this manual and the instruction manual of your Gastec Gas Sampling Pump.

⚠ WARNING :

1. Use only Gastec detector tubes in a Gastec pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. Using non-Gastec parts or components in Gastec's detector tube and pump system or using a non-Gastec detector tube with a Gastec pump or using a Gastec detector tube with a non-Gastec pump may damage your detector tube and pump system, or may cause serious injuries, or death to the end-user. It will also void all warranties, and guarantees regarding performance and data accuracy.

⚠ CAUTION : If you do not observe the following precautions, you may suffer injuries or damage the product.

1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, broken pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sampling.

△ NOTES : For maintaining performance and reliability of the test results, observe the following.


1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
3. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the table "INTERFERENCES" below.
5. The shelf life and storage condition of the tube are marked on the label of the tube box.

APPLICATION OF THE TUBE :

Use this tube for detecting Tetrahydrofuran in the air or in industrial areas and for determining the environmental atmospheric condition.

SPECIFICATION :

(Because of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

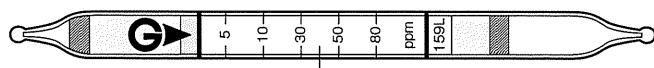

Detecting Layer

Measuring Range	5 - 80 ppm	80 - 232 ppm
Number of Pump Strokes	1	1/2
Stroke Correction Factor	1	2.9
Sampling Time	2 minutes per pump stroke	1 minute
Detecting Limit	1.4 ppm (n=1)	
Colour Change	Pale yellow → Pale blue	
Reaction Principle	$C_4H_8O + Cr^{6+} + H_3PO_4 \rightarrow Cr^{3+}$	

Coefficient of Variation: 10% (for 5 to 10 ppm), 5% (for 10 to 80 ppm)

****Shelf Life: Please refer to the validity date printed on the tube box.**

****Store the tubes at 10°C (50°F) or below in the refrigerator.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

Temperature : Correct for temperature by the table below.

Temperature (°C) (°F)	0 (32)	5 (41)	10 (50)	15 (59)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)
Correction Factor	2.15	1.80	1.50	1.25	1.00	0.90	0.80	0.75	0.70

Humidity : No correction is required.

Pressure : To correct for pressure, use the formula below.

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

MEASUREMENT PROCEDURE :

1. For checking the leakage of the pump, insert a freshly sealed detector tube into pump. Follow instructions provided with the pump operating manual.
2. Break tips off a fresh detector tube with the tube tip breaker in the pump.
3. Insert the tube into the pump inlet with arrow (G) on the tube pointing toward the pump.
4. Make certain the pump handle is all the way in. Align the guide marks on the pump body with the guide marks on the handle.
5. Pull the handle all the way out until it locks at one pump stroke (100 mL). Wait two minutes and confirm the completion of the sampling.
6. For measurements higher than 80 ppm, prepare a fresh tube and perform a half pump stroke.
7. Read the concentration level at the interface where the stained reagent meets the unstained reagent.
8. If necessary, multiply the readings by the correction factors of temperature, pump strokes and atmospheric pressure.

INTERFERENCES :

Substance	Concentration	Interference	Interference gas only
Acrolein	≥ 30 ppm	+	Pink when 30 ppm or higher
Acetone	≤ 200 ppm	No	Pink when 200 ppm or higher
Acetic acid	≤ 200 ppm	No	No discolouration up to 400 ppm
Ethyl acetate	≥ 1 ppm	+	Pink when 2 ppm or higher
Diethyl ether	≤ 1 ppm	+	Pale blue
Trichloroethylene	≤ 100 ppm	No	Pink when 100 ppm or higher
Toluene	≥ 1 ppm	+	White when 4 ppm or higher
n-Hexane	≥ 10 ppm	Cannot use due to unclear demarcation	Pink when 10 ppm or higher
Benzen	≤ 100 ppm	No	White when 500 ppm or higher
Methanol	≥ 2 ppm	+	Pink when 5 ppm or higher Pale blue when 9 ppm or higher
Methyl ethyl ketone	≥ 2 ppm	+	Pink when 3 ppm or higher

This table of interference gases primarily expresses the interference of each coexisting gas in the concentration range, that is equivalent to the gas concentration. Therefore, the test result may show positive results due to other substances not listed in the table. If more information is needed, please contact us or Gastec representatives.

DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2015): 50 ppm

Threshold Limit Value-Short Term Exposure Limit by ACGIH (2015): 100 ppm

INSTRUCTIONS ON DISPOSAL :

The reagent of the tube uses a small amount of hexavalent chromium. When disposing the tube regardless of whether it has been used or not, follow the rules and regulations of your local government.

WARRANTY :

If you have any questions regarding gas detection and the quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation
8-8-6 Fukayanaka, Ayase-City, Kanagawa 252-1195, Japan
<http://www.gastec.co.jp/>
Telephone +81-467-79-3910 Facsimile +81-467-79-3979

IM00159LE1
Printed in Japan
15F1Z