GASTEC Instructions for No.140 Aliphatic hydrocarbons Detector Tube

FOR SAFE OPERATION:

Read this manual and the instruction manual of your Gastec Gas Sampling Pump carefully.

MARNING:

- 1. Use only Gastec detector tubes in a Gastec Pump.
- Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
- 3. The use of non-Gastec parts or components in Gastec's detector tube and pump system or use of a non-Gastec detector tube with a Gastec pump or use of a Gastec detector tube with a non-Gastec pump may result in property damage, serious bodily injury, and death; voids all warranties; and voids all performance and data accuracy guaranties.

⚠ CAUTION : If not observed, injuries to the operator or damage to the product may result.


- 1. When breaking the tube ends, keep away from eyes.
- 2. Do not touch the broken glass tubes, pieces and reagent with bare hand(s).
- The sampling time represents the time necessary to draw the air sample through the tube.The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sample.

\triangle NOTES: For maintaining performance and reliability of the test results.

- Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
- 2. Use this tube under the temperature range of 0 40°C (32 104°F).
- 3. Use this tube under the relative humidity range of 0 90%
- 4. This tube may be interfered with by the coexisting gases. Please refer to the "INTERFERENCES".
- 5. Shelf life and storage condition of the tube is marked on the label of the box of tube.

APPLICATION OF THE TUBE: Use this tube for the detection of Aliphatic Hydrocarbons in air or the industrial areas and environmental atmospheric condition.

SPECIFICATION: (As a result of Gastec's commitment to continued improvement, specifications are subject to change without notice)

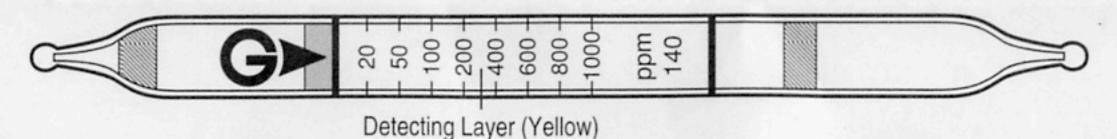

Measuring Range	6 - 20 ppm	20 - 1000 ppm	1000 - 3000 ppm		
Number of Pump Strokes	2	1	1/2		
Correction Factor	0.3	1	3		
Sampling Time	4 minutes per pump stroke		2 minutes		
Detecting Limit	1 ppm (n = 2)				
Colour Change	Yellow → Dark brown				
Reaction Principle	Aliphatic Hydrocarbons + Cr ⁶⁺ + H₂SO ₄ → Cr ³⁺				

Coefficient of Variation: 10% (for 20 to 1000 ppm)

** Shelf Life: Please refer to the Validity Date printed on the box of tube.

** Store the tubes under dark and cool place.

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE:

Temperature: Correct for temperature by the table below:

Temperature °C (°F)	0 (32)	10 (50)	20 (68)	30 (86)	40 (104)
Correction Factor	2.5	1.5	1.0	0.65	0.45

Humidity:

No correction is required.

Pressure:

To correct for pressure, multiply the tube reading by

Tube Reading (ppm) × 1013 (hPa)
Atmospheric Pressure (hPa)

MEASUREMENT PROCEDURE:

- For leak tight check of the pump insert a fresh sealed detector tube into pump.
 Follow instructions provided with the pump operating manual.
- 2. Break tips off a fresh detector tube in the tube tip breaker of the pump.
- Insert the tube securely into pump inlet with arrow (♠►) on the tube pointing toward pump.
- 4. Make certain pump handle is all the way in. Align guide marks on pump body and handle.
- Pull handle all the way out until it locks on 1 pump stroke (100mL). Wait 4 minutes and confirm the completion of the sampling.
- 6. For lower than 20 ppm measurement, repeat the above sampling procedure one more time until the stain attains to the first calibration mark. For higher than 1000 ppm measurement, prepare fresh tube and take 1/2 pump strokes.
- 7. Read concentration at the interface of the stained-to-unstained reagent.
- 8. If correction is needed, multiply the correction factors of temperature pump strokes and pressure.

DISPOSAL INSTRUCTION: This tube contains a small amount of hexavalent chromium. When dispose of the tube regardless of used or unused, follow the rules and regulations of the local government.

WARRANTY: If you have any questions regarding gas detection and quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer: Gastec Corporation

8-8-6 Fukayanaka, Ayase-City, 252-1195, Japan

http://www.gastec.co.jp/

Telephone +81-467-79-3910 Facsimile +81-467-79-3979

Printed in Japan 07B1Z